

General Notices

- Consistently make multiple backup copies of your data for your protection. Hard disk drives are subject to failure at any time.
- Rocstorage, Inc. shall not be held liable for loss of data or the restoration or recovery of data on the device. Please see complete Limited Warranty Information in the User's Manual or on the Rocstor website (www.rocstor.com) for further details.

Capacity Disclaimer

Actual accessible hard drive capacity will indicate up to 10% lower than stated under different Operating Systems and formatting. Therefore, a 500GB capacity drive will show up as a 450GB drive (approximately.)

Warranty Period

The Limited warranty period for Rocpro hard drives is two years for parts and labor.

Technical Support / RMA

Tel: (888) 877-7716 (USA and Canada)

Tel: +1 (818) 449-2000 (Domestic and Internationals)

Fax: +1 (818) 884-8777

Hours: 9:00 am - 5:00 pm PST, Mon - Fri (excluding holidays)

Email: support@Rocstor.com

Trademarks Acknowledgements

© 2008, Rocstor, Rocsecure and Rocpower are registered trademarks of Rocstorage, Inc. Rocpro, Rocport, Rocbit, are the trademarks of Rocstorage, Inc. "store your future", "secure your future" and "power your future" are the slogan marks of Rocstorage, Inc. Apple, the Apple logo, Mac, Power Macintosh, FireWire, and Mac Pro, Leopard ... are trademarks of Apple Computer, Inc. Microsoft, MS-DOS, Windows CE, Windows NT, Windows 98, Soft Windows, Vista ... are registered trademarks of Microsoft Corporation. All other names are trademarks of their respective companies in the United States and other countries. © 2000 – 2008
Ver.0401G



Assembled/designed/integrated in the U.S.A.
using domestic and/or foreign components.

store your future

**ROCPRO 850**

eSATA, FireWire 800 (400) and USB 2.0

Quick Installation Guide

Contents

- External hard disk drive
- Stand for vertical mounting
- USB cable
- 9-pin to 6-pin FireWire 800 (1394b) cable
- 9-pin to 9-pin FireWire 800 (1394b) cable
- eSATA cable
- AC power cord
- Installation user Guide CD
- Carrying case



Minimum System Requirements:

Mac Users:

Hardware: eSATA* or FireWire* 800 1394b or USB (1.1 or 2.0) port(s.)
Mac: PowerPC or Intel processor running Mac OS 9, X or Leopard
Min. recommended memory: 512 MB RAM

Window Users:

Hardware: eSATA* or FireWire* 800 1394b or USB (1.1 or 2.0) port(s.)
Operating Systems: Microsoft Windows 2000, Me, XP or Vista
Min. recommended memory: 512 MB RAM

*If you wish to utilize FireWire or eSATA ports and your computer does not support such interfaces you may be required to purchase an interface as an optional device. www.rocstor.com

Connecting the Drive

1. Turn ON your computer and wait until it fully boots up to load all programs.
2. Connect one end of the power cord directly to the Rocpro 850 and the other end to an AC outlet, surge protector or battery Backup (UPS).



3. Using only one interface cable at a time, select the interface port you wish to use on your computer. Connect one end of the cable to the Rocpro 850 and the other end to the computer.



4. Turn the Rocpro 850 Hard Drive switch ON.
5. The Hard drive is preformatted for Plug-and-Play operation. After a few seconds a Rocstor HD icon will show on "My Computer" folder under the Windows OS. Under the Mac OS, the Rocport HD will appear on the "Desktop."
6. Click (double click) on the Rocstor HD icon to access the drive.